


## Garage Sensor Components

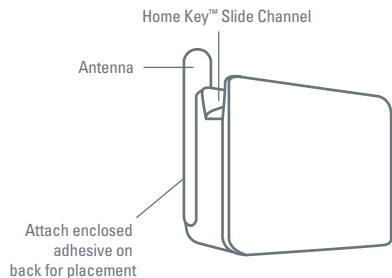

## Garage Sensor Uses:

- Garage Door
- Attic Hatch
- Beverage Cooler
- Box
- Chest
- Container
- Hatch
- Hope/Cedar Chest
- Jewelry Box
- Pet Door
- Roll Top Desk
- Service Hatch
- Strongbox
- Toy Chest
- Tool Box
- Trunk
- Laptop PC

### FCC Statement

(Compliance Statement, Part 15.19): This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

WARNING (Part 15.21): Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

To comply with FCC's RF exposure limits for general population/uncontrolled exposure, the antenna(s) used for this transmitter must be installed to provide a separation distance of at least 20 cm from all persons and must not be co-located or operating in conjunction with any other antenna or transmitter.

### Industry Canada Statement

The term "IC" before the certification/registration number only signifies that the Industry Canada technical specifications were met.

### Interference

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, then the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna
- Increase the separation between the equipment and the receiver
- Connect the equipment into a power source on different circuit than the receiver.

### Sensor Maintenance and Battery Replacement

#### Cleaning the sensor

Clean with a soft, dry cloth.

#### To check sensor battery level

Using the Home Key, highlight the sensor icon. Click the thumbwheel once and note the battery status on the bottom line of the screen.

#### To check if sensor battery is low or depleted

When sensor battery is low, a flashing low battery icon appears on the Home Key above the sensor icon, and the screen is amber in color. When a battery is depleted, a question mark will appear above sensor icon.

#### Replacing a depleted battery

Remove the depleted battery and replace with one lithium CR123A 3V battery, available through the Internet and anywhere camera and camcorder supplies are sold.

IM00416011E Rev. 1  
Part No.: 67A5019H01  
© 2006 Eaton Corporation

**EATON**

**HOME**heartbeat™  
 **Garage Sensor**

**EATON**

## Garage Sensor

### 1 Set up



**CARRY** the sensor, battery, and the Home Key to the location where you want to place it.

**OPEN** the sensor cover and insert the battery. The green LED light inside the sensor should flash four times if the battery is good. Close the cover.

**CLICK** the Home Key thumbwheel to wake the screen, and **SLIDE** the Home Key into the Slide Channel on the top of the sensor. The Home Key screen should say:


Please wait...  
Device found  
OK to remove Key.

Follow the instructions on the Home Key screen to join the sensor to the system, name it, and set **In-Home Awareness** and **"CallMe" Awareness**. After options are set and you click **Done, go back?**, the Home Key screen will indicate that the sensor is joined to the system. You may go to Step 2.

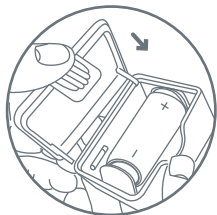

### 2 Test

If you slide the Home Key into the sensor Slide Channel and the Home Key screen shows either of the following messages, it means that the Home Key or sensor may be outside the range of the Base Station.

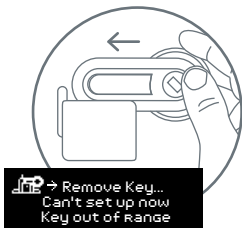

If the Home Key or sensor is out of range, you can:

- Add a Home Heartbeat Range Extender between the Base Station and Garage Sensor, or
- select an alternate location for the Garage Sensor, or
- try moving the Base Station to a more central location in your home. Then, complete Step 1 again.



### 3 Place & Use

If the sensor is in range of the Base Station, **MOUNT** it to the surface in a convenient location by attaching either the enclosed adhesive tape on the back or using two #4 wood screws (not included).\*

\*Be sure that the area of installation is clean and dry.

For the Garage Sensor to function, it is important to orient it correctly. First, make sure that the sensor is in range of the base station. **CLOSE** the door. Place the sensor so that the antenna is pointed up. **MOUNT** it to the surface in a convenient location by either attaching the enclosed adhesive tape on the back or using two #4 wood screws (not included). The sensor will show **closed** while the door is in a vertical position and **opened** while the door is in a horizontal position. For items like a chest or trunk mount the sensor on the inside of the lid with the antenna facing up when the lid is open.

*Note: Indoor use only*

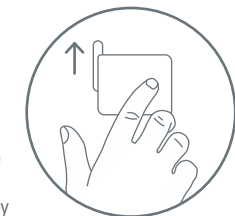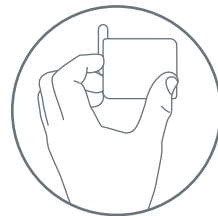

Need help? Call **1-800-813-2199** for customer support or visit [www.homeheartbeat.com](http://www.homeheartbeat.com)

**If Your Garage Sensor . . .**

- will not respond, make sure the battery in the sensor is installed correctly.
- does not send a signal to the Base Station, move the sensor and Base Station closer together (or consider getting a Home Heartbeat Range Extender).

**EATON**